

## VAP11N External Antenna Solution

- 1、 Remove the original antenna of the VAP11N
- 2、 Make the new antenna weld to the corresponding position of the VAP11N, as the following picture.

C:original antenna of the VAP11N    A:signal ant    B:GND ant

